



 
## HOW TO:

# Specify SoundStik Switches


## For Client Device Control

Normally Open (NO) and Normally Closed (NC) switches describe the state of the switch when not controlled by the magnet. Two conductors are added to the tether for hookup to your device.

**Note:** To automatically silence the speaker when the SoundStik is hanging up, the switch is entirely within the handset. Ask for auto-mute switch.

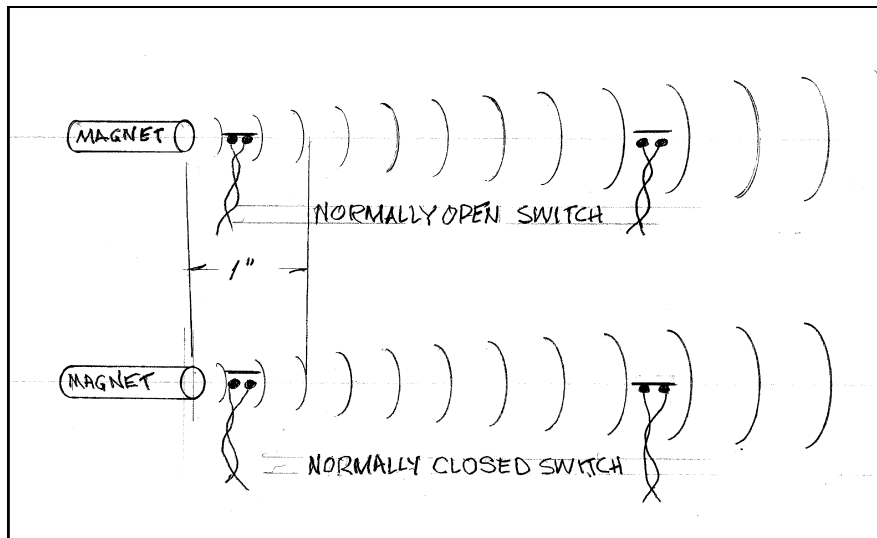

SoundStik internal switch prevents or allows current flow when within about 1" of Hanger Mount magnet.

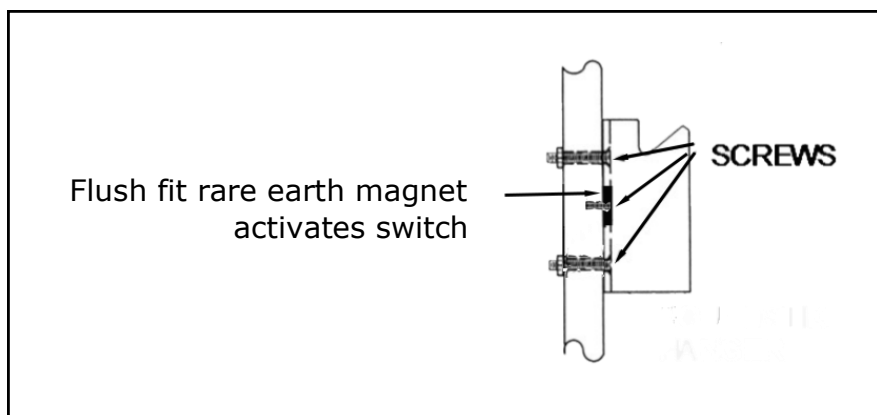

Woman Owned Small Business SAM Active  
25 Van Zant Street, Unit 14-7B, Norwalk, CT 06855

US Toll Free: 1.800.866.2113

TEL: +1.852.5557 FAX: +1.203.852.5559

<https://www.vistagroupinternational.com/support> [info@vistagroupinternational.com](mailto:info@vistagroupinternational.com)